

# RUBBER BUMPERS & PLASTIC FEET

For use on chassis boxes and equipment cabinets


Rubber feet/bumpers are self-adhesive and supplied on a backing sheet. Application simply requires peeling individual foot from the backing and sticking it to your cabinet or chassis box. Soft rubber but will not leave marks on hard surfaces.

Soft but firm, these three items make good bumpers, feet for chassis boxes and spacers for PC boards. All are black in color and about 70 durometer hardness.

## Dome Shaped RUBBER FOOT or BUMPER

Dome shaped, self adhesive foot. Peel off of backing and apply to any clean, smooth surface. Semi-soft rubber does not normally leave marks.

Diameter at base: .630" Height: .317"

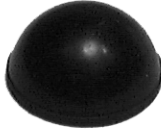


**No. 10-605** 12 pack

## Tapered Square RUBBER FOOT or BUMPER

Self adhesive and will stick well to a chassis box. Semi-soft rubber will not easily leave marks.

Width at base: 0.50" Height: .237"

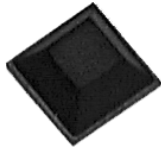

**No. 10-610** 12 pack

## Tapered Cylinder RUBBER FOOT or BUMPER

Shaped like a tapered cylinder, self adhesive and will stick well to a chassis box. May be used with a no. 8 wood screw or machine screw, if necessary. Semi-soft rubber will not easily leave marks.

Diameter at base: .870" Height: .40"



**No. 10-602** 12 pack

## Plastic Cabinet Feet

Molded of durable, high-impact plastic. Generally used in sets of four on the bottoms of chassis boxes, equipment cases and cabinets. All are packaged four per display package and are also available in bulk.

### "Tail" PLASTIC FOOT.

A standard style foot, tapered. Made of hard, high-impact plastic. Mount with no. 8 screw (not supplied). Color black.



**No. 10-647** 4 pack

### "Low Profile" PLASTIC FOOT

Semi-hard, molded plastic foot with just enough softness to improve durability and that softens the sound and shock a bit. Mount with a number six machine screw and nut or with wood screw. Diameter: .986" Height: .235"



**No. 10-650** 4 pack

### Collet mounting Plastic Foot

A clever design, the foot can be mounted on a cabinet from the outside. Drill a hole 5/16" hole and place the foot into the hole. Then press a plastic pin (supplied) through the center of the foot; the pin spreads the integral collets and the foot is attached.

Diameter: .775" Height: .388"



**No. 10-644** 4 pack

## Brass SPACERS

Solid brass, chrome plated spacers. Size 1/4" across the flats, threaded inside either 4-40 or 6-32. Available in small packages and bulk as well; bulk buyers should add a "B" suffix to the number (example 10-1110B) and bulk minimum is fifty (50) pieces per stock number.



## Threaded 4-40 Brass Spacers

Part No.	Length	Qty.. Per Pack
10-1110	.250	8
10-1111	.375	8
10-1113	.500	8
10-1114	.625	4
10-1116	.750	4
10-1119	.875	4
10-1120	1.00	4

## Threaded 6-32 Brass Spacers

Part No.	Length	Qty.. Per Pack
10-1130	.250	8
10-1131	.375	8
10-1133	.500	8
10-1134	.625	4
10-1136	.750	4
10-1139	.875	4
10-1140	1.00	4